

# Austroflex EL3 Handset Instructions



### - Safety instructions:

- Never open the housing of the cable handset! Unauthorised opening of the housing will invalidate the warranty.
- · Repairs must be carried out only by the manufacturer!
- . Do not allow any liquids to get into the cable handset.
- · First check that the cable and housing is not damaged. If this is the case, do not use the handset, but take it back to your dealer for replacement.
- . Do not look directly into the torch LED!
- . Do not allow children to play with the cable handset without supervision!

## Setting Up:

2.1 Connection of the cable handset insert the 6-pole plug of the handset cable into the corresponding socket of the bed adjustment drive. Refer to the adjustment drive's manual for instructions which socket to use.

Connect the mains plug of the bed adjustment drive to the mains power socket.

### 2.3 Initialising the system


Before you can use the handset, the system must be


To do this, please proceed as follows:

- Press button B (All drives downward).
   Keep the button pressed until the bed has reached the flat position and all the motors have switched off.
- · The system is now ready for operation.

Now the installation of the handset has been completed.

Operating instructions see page 2!

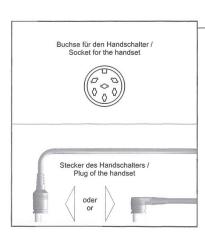

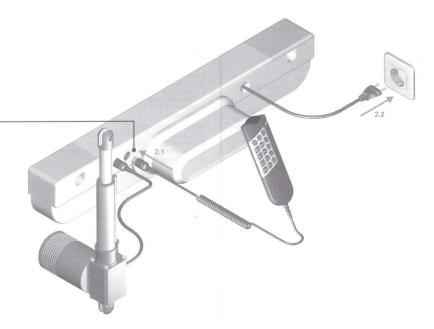

## 3 Bedienung • Operation:

(LED) Function control LED

When a button is pressed, this LED lights up.

- (A) All drives upward together
- (B) All drives downward together
- (C) Neck adjustment upward
  (D) Neck adjustment downward
  (E) Back adjustment upward
- (F) Back adjustment downward
- (G) Leg adjustment upward
- (H) Leg adjustment downward
- (I) Store memory position
  (J) Calling off memory position 1
- (K) Calling off memory position 2
- (L) Calling off memory position 3
- (M) Button for optional torch function
- (T) Torch LED
- (N) Button for optional light module
- (O) Button for opt. remote controlled mains socket VIF/S2

#### Bed adjustment

Use the buttons A-H. The bed adjustment drive will work as long as the button is pressed.

Storing positions (memory)
Adjust the bed with the buttons C - H until you have reached a comfortable position. Then please proceed as follows:

- · Press button (I) three times
- . Then press button (J) within 4 seconds.
- · The successful storing of the memory position will be confirmed by means of a buzzer signal.

To save two more preferred positions, please proceed as mentioned above. Use the buttons (K) and (L).

We recommend the following settings:

- Memory position 1 (J) = Reading position
- Memory position 2 (K) = TV position
- Memory position 3 (L) = Sleep position

Calling off stored positions
The stored positions can now be called off by pressing one of the buttons (J), (K) and (L).

To do this, please proceed as follows:

· Press and hold one of the above mentioned buttons. Once the programmed position has been reached the drives will stop automatically regardless of you pressing

#### Torch function (optional)

If you press this button the torch LED (T) will be switched on. If you press the button continously, the LED keeps on lighting. If you release the button the LED will switch off automatically after approx. 3 seconds.

## 4 Fehlerbehebung • Troubleshooting

- · No function, LED doesn't light up when pressing a
- Check whether the adjustment drive is properly connected to the power outlet and if there is power.
- Check whether the hanset is properly connected to the adjustment drive
- · LED lights up but the drives won't move.
- Make sure the drives are not blocked.
- Initialize the system (see 1.3)
- · The drives should now move without problems. If not, please turn to your dealer for assistance.

## 5 Garantie • Warranty:

Die Firma VIBRADORM gewährt auf den Kabelhandschalter eine Garantie von 24 Monaten ab Kaufdatum. Von der Garantie ausgeschlossen sind Ausfälle, die durch eine unsachgemäße Behandlung hervorgerufen wurden. Die Garantie erlischt sofort, wenn das Gehäuse von jemand anderem als von einem Mitarbeiter des Herstellers geöffnet werden.

VIBRADORM gives a 24 month warranty for the cable handset from the date of purchase. This warranty excludes malfunction through misuse. The opening of the housing by any person other than a qualified VIBRADORM employee will invalidate the warranty.

Änderung der Informationen in diesem Dokument ohne vorherige Bekanntmachung vorbehalten.

Information in this document is subject to change without notice.

# pg 2

# Austroflex EL3 Handset Instructions

