
TOP DOWN VIEW OF MOTOR

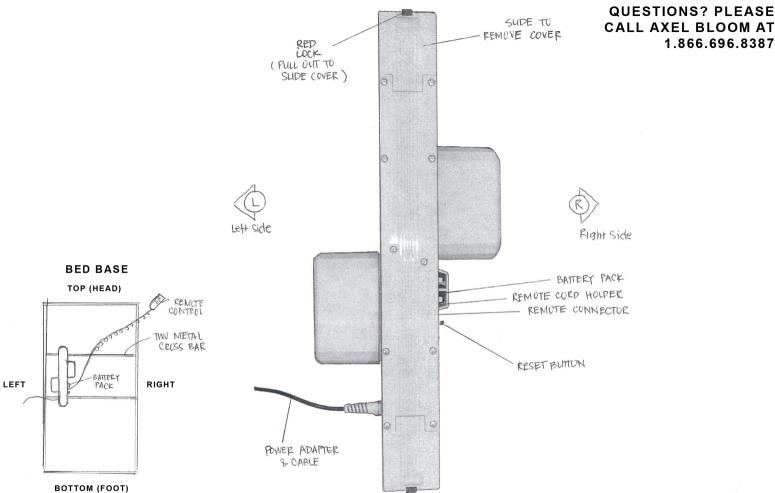




*NOTE: MOTOR IS ALWAYS ON THE LEFT OF BED BASE

RIGHT SIDE VIEW OF MOTOR




QUESTIONS? PLEASE CALL AXEL BLOOM AT 1.866.696.8387

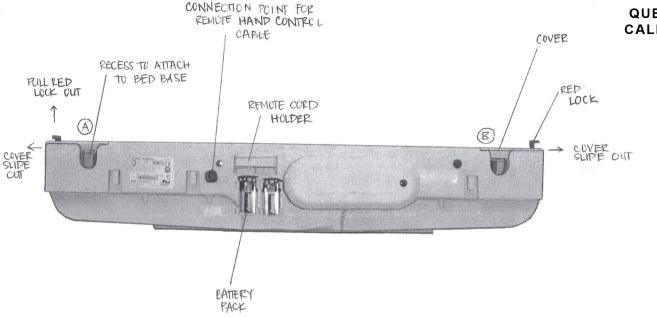

- 1. PLACE BED BASE WITH TOP SIDE ON THE FLOOR.
- 2. NOTE THAT THERE ARE 2 "HOOKS" ON THE METAL ARM
- 3. PULL OUT THE 2 RED LOCK FROM THE MOTOR & SLIDE THE 2 COVERS OFF THE RECESS A+B OUT (SEE ABOVE)
- 4. FLIP OVER THE MOTOR & PLACE OVRE THE MOVABLE METAL ASSEMBLY SO THAT THE A+B HOLE RECESSES FIT INTO THE HOOKS.
 - * THE BATTERY PACK SHOULD BE CLOSER TO THE FOOT SECTION OF THE BED BASE (PLEASE SEE PAGE 1 FOR ILLUSTRATION)
- 5. SLIDE BACK THE COVERS AT EACH END SO THEY LOCK IN WITH THE HOOKS SECURELY WITH THE MOTOR.
- 6. PUSH BACK RED LOCK.
- 7. CLIP ON CONNECTORS TO BATTERY PACKS & CONNECT REMOTE CONTROL CABLE.
- 8. TURN BASE OVER.



CLOSE UP VIEW OF REMOTE CONTROL CABLE & CONNECTION TO MOTOR

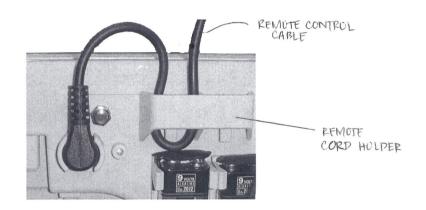

TO LENGTHEN CABLE FOR REMOTE HANDHELD CONTROL, DISENTANGLE REMOTE CONNECTOR CABLE BY:

- A. UNCONNECTING FROM MOTOR
- B. SNAKE OUT CABLE FOR MAXIMUM LENGTH TO SIDE OF BED
- C. RECONNECT ELECTRICAL PLUG BACK INTO MOTOR.

INSTALLATION OF ELECTRIC BE D BASE

- A. If you have a new/existing bed frame from Axel Bloom: Drop the bed base to rest on the center beam of the bed frame and the side brackets. No screws are required.
- B. If you have your own bed frame: You should already have a similar supporting structure for the bed base to rest on.
- C. If you have no frame: Screw on the cross beam (with the washers facing up) to connect both bed bases and screw on the feet. (See separate attachment for illustration)
- 1. Before placing the mattress, press the handheld control unit buttons to observe that the electric bed base is operating correctly.
- 2. There are several electric bed base models. Please refer to the model's instruction booklet for more information. In general, the top row of buttons raise/lower the head/shoulder region. The lower buttons control the foot section.